

C3200/5150/C5200/C5400 PRINTERS

BELT INSTRUCTIONS

Belt Replacement for Oki 42158711

Warning!

If the printer has recently been powered on, some fuser components will be very hot. Handle the fuser with extreme care, holding it only by its handle, which will only be mildly warm to the touch.

A warning label clearly indicates the area. If in doubt, switch the printer off and wait at least 10 minutes for the fuser to cool before opening the printer cover.




1. Press the cover release and open the printer's top cover fully.




2. Note the positions of the four image drums: Cyan (1), Magenta (2), Yellow (3), Black (4). It is essential that they go back in the correct order!

3. Lift each of the image drum units out of the printer and place them in a safe place

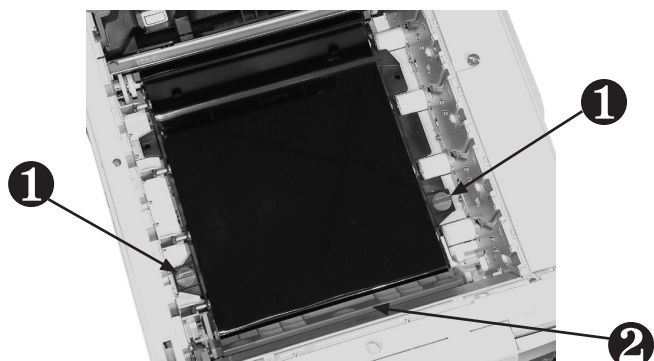

4. Locate the two blue locks (1) and the handle (2).

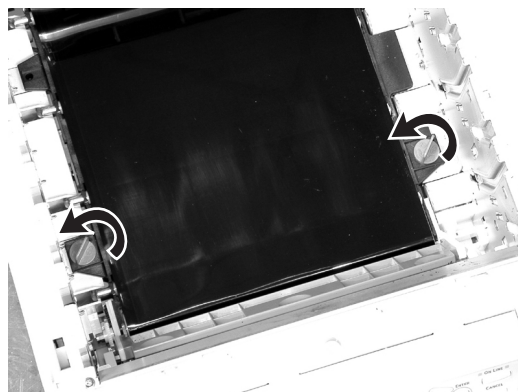


5. Turn the two locks about 45 degrees counterclockwise to release the belt.



6. Pull up the handle and lift the belt unit out of the printer.

7. Unpack the new belt unit and hold it with the blue handle toward the front of the printer.

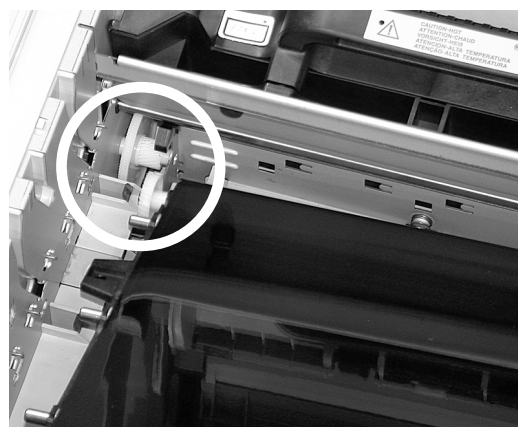


8. Place the drive gear at the back of the belt unit in the gear at the left rear corner of the printer, and lower the belt unit into the printer.


C3200/5150/C5200/C5400 PRINTERS BELT INSTRUCTIONS

Belt Replacement for Oki 42158701

Side 2

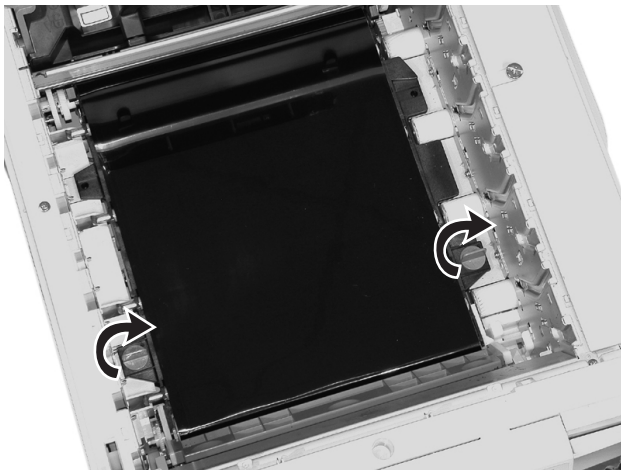

9. Turn the two belt locks about 45 degrees clockwise to secure the belt unit in place.

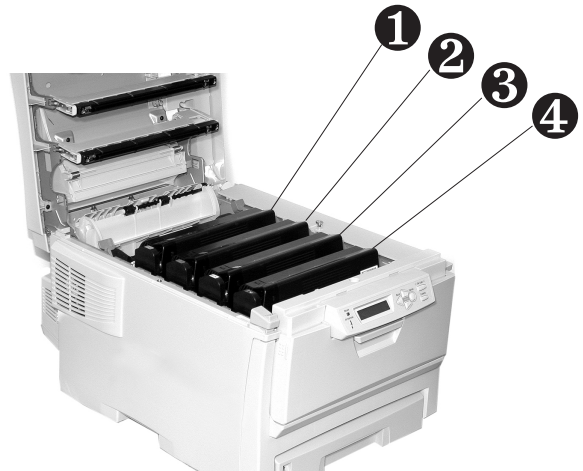

10. Place the four image drums/toner cartridges back in the printer (1 = Cyan, 2 = Magenta, 3 = Yellow, 4 = Black):



11. Close and latch the top cover.